

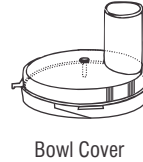
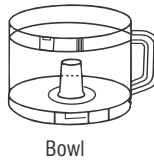



FOOD PROCESSOR GL 4051

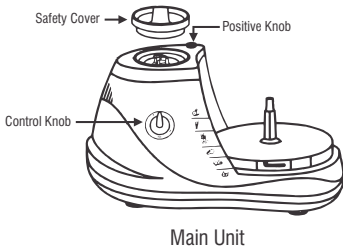


How to operate the Food Processor (Main unit)

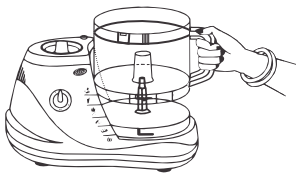


- 1 Place the main bowl on the shaft, centre by holding the handle in your right hand. Match the marking of the bowl & main body.

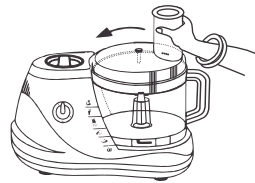


- 4 Turn it anti clockwise, till a click sound is heard which means the bowl cover is locked in place.

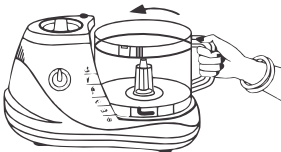


- 2 Turn it anti clockwise till a click sound is heard, which means it is locked in place.

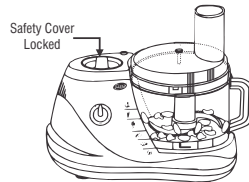

- 5 Make sure the safety cover is locked in position (as shown in the picture). Lock anti clockwise, Unlock clockwise.

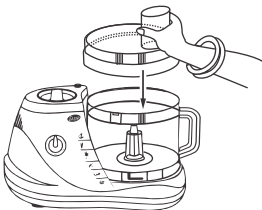

- 3 Hold the bowl cover, and place it on the bowl as shown, after aligning the line markings with bowl. Make sure the position of feeder tube is the same as shown in the picture.

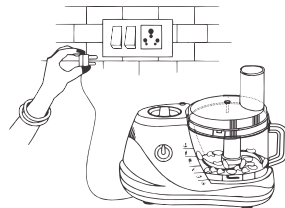

- 6 Plug in the unit and turn ON the control knob to check for functioning.
To unlock bowl cover first keep the positive knob pressed & rotate the bowl cover clockwise to unlock and lift.

Note: The unit will not start if safety cover & bowl set is not positioned & locked properly

In case you face any problem you may call our customer care at 0129-2254191/2/3, 9873545555 and they will explain you on phone