

 
 
GLEN
Live Better !

Rice Cooker
GL 3056
GL 3057

User's Guide




Identify your Rice Cooker

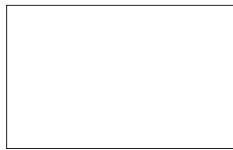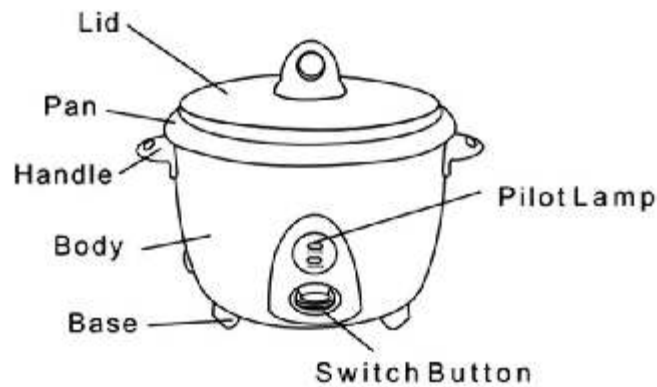

Cooking Plate



 Measuring Cup / Scoop



Power Cord

Using your Rice Cooker

- Measure out required quantity of rice using measuring cup provided. Wash rice in a sieve until the water is clear. Put the cooking plate in the pan, next put the rice in the cooking pan and add water up to the level which corresponds to the measure of rice used. eg. for 4 cups of rice, add water to level 4 as marked on the inside of the cooking pan. However, the quantity of water used will depend on the age and strain of the rice, as well as personal taste. Do not exceed the maximum water level mark.
- Place the cooking pan inside the rice cooker, making sure that the base is dry. Ensure that cooking pan is in direct contact with the heating element by rotating it slightly left and right until it seats properly. The rice cooker may malfunction if the cooking pan is incorrectly positioned.



Always keep the exterior bottom of the cooking pan and heating plate clean and dry.

- When ready to cook, connect the power supply cord to the rice cooker first, then the plug into an AC wall outlet. Press COOK. Once rice is cooked, a built-in heat sensor will automatically switch to WARM mode. Allow rice to rest for about 15 minutes before serving.
- Using the rice scoop, huff up the rice to separate the grains. The cooking plate also helps prevent sticking of the food while cooking. Do not use metal utensils on the non-stick lined cooking pan. Remember to unplug the rice cooker when not in use.
- When rice is cooked, it can be kept warm for a long time. The temperature is maintained between 60-70° C. Below this point the yellow lamp will flicker indicating action of the keep warm function.



Fig(1)



Fig(2)

Using the cooker as a steamer

- Put water in the cooking pan, taking care not to exceed the maximum water level mark.
- Place the cooking pan inside the rice cooker, making sure that the base is dry and it seats properly in position.
- Put the vegetables to be steamed in the steamer.
- Place the steamer in the cooking pan and close the lid.
- Connect the power cord and press the Cook button.
- Switch Off and open the lid as per the steaming time of the vegetables and in case the desired result is achieved switch off the Cooker.
- Please note that while steaming the cooker will not switch to keep warm automatically, as long as there is water in the pan.

Safety Precautions

- Read all instructions carefully before using the appliance for the first time.
- Always attach electric cord to the appliance before plugging into the wall outlet. Unplug from outlet when not in use.

- The use of accessory attachment not recommended by the appliance manufacturer may cause injuries.
- Do not place on or near a hot gas or electric burner or in a heated oven. Place the appliance on a level surface.
- Do not let electric cord touch hot surface or hang over the edge of a counter or table, or across the range top where it can be pulled by children or tripped over accidentally.
- Be extremely careful when moving an appliance containing hot water.
- Scalding may occur if the lid is opened while cooking is in progress.
- Always unplug the appliance and allow to cool before cleaning. To protect against electric shock, do not immerse the appliance and electric cord in water or any liquid, or allow liquid to come into contact with electrical parts.
- Do not operate the appliance outdoors.
- Do not use the appliance for other than intended use.
- Close supervision is necessary when this product is used by or near children.
- Do not use the appliance if it has malfunctioned or has been damaged in any way. Take it to an authorized service centre for examination, repair or adjustment.
- This Product is for Household Use only.

For your protection: A short cord is provided to reduce the hazards resulting from entangled cords or tripping over a longer cord. If it is necessary to use an extension cord, it must be rated no less than the electrical rating of this appliance. Longer detachable power supply cords or extension-cords may be used if care is exercised in their use.

- Refrain from using a multi-purpose adaptor.
- Do not operate the rice cooker when empty or when maximum capacity is exceeded.
- Keep away from direct sources of heat or strong sunlight to prevent possible damage.
- Do not cover or obstruct the steam vent. Where possible, keep the rice cooker away from overhead cabinets or equipment.
- Replace rubber gasket on the lid when it is showing signs of fatigue or wear. (Please contact your local distributor for replacement details.)
- Always keep the rice cooker unplugged when not in use.

Cleaning and Maintenance

Always unplug the rice cooker and allow to cool before cleaning.

- Wash the cooking pan in warm, soapy water using a sponge or dishcloth. Do not use harsh abrasive cleaners. Rinse and dry thoroughly. Keep the cooking pan scrupulously clean especially if salt or salty ingredients have been used.
- Gently remove the dew collector (fitted onto the back of the rice cooker) by pulling downwards. Discard the water after every use.
- Wipe over other surfaces with a damp cloth, paying attention to recesses which could trap food or water. **Do not immerse the rice cooker in water or any liquid.**
- Check to make sure the heating plate is clean and free of food or grit which could interfere with the proper functioning of the rice cooker. Any burnt-on residue could be removed by gently scrubbing the heating plate with a damp piece of steel wool. Wipe and dry the heating plate to ensure good contact with the cooking pan.

Specifications

Model No.	GL 3056	GL 3057
Capacity	1.8 Litres	2.8 Litres
Temperature range :	60° to 280° C	
Power :	650 Watts	950 Watts
Connection :	220-240V/AC 50 Hz	
Dimensions L/W/H :	283 x 283 x 285 mm	

WARRANTY

This Rice Cooker is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if:

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- The serial no. has been deleted, defaced or altered.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

SERIAL NO. _____

MODEL NO.: GL 3056 / GL 3057 _____

DATE OF PURCHASE _____

DEALER'S STAMP & SIGNATURE

GLEN

Glen Appliances Pvt. Ltd.

I-34, D.L.F. Industrial Area, Phase I, Faridabad (Haryana)

Helpline: 0129-2254191

Email: info@glenindia.com www.glenindia.com