

WARRANTY

This GLEN Hand Mixer is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of two years from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service center, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

PRODUCT NAME : HAND MIXER GL 4060

SERIAL NO. : _____

DATE OF PURCHASE : _____

DEALER'S STAMP & SIGNATURE

SPECIFICATIONS

Supply Voltage : 220V-240V~50Hz

Power : 150W

Imported & Marketed by/In case of customer complaints Contact Manager - Customer Support

Glen Appliances Pvt. Ltd., I-34, DLF Ind. Area, Phase-I, Faridabad, India.


Helpline : 0129-2254191

E-mail : info@glenindia.com Website : www.glenindia.com

GLEN


Live Better !

Hand Mixer
GL 4060

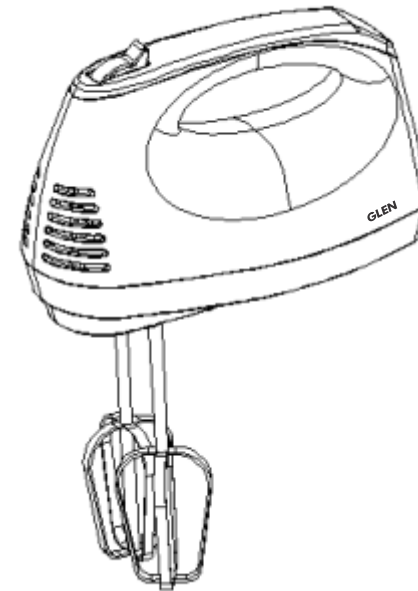

USER'S GUIDE

IDENTIFY YOUR HAND MIXER GL 4060

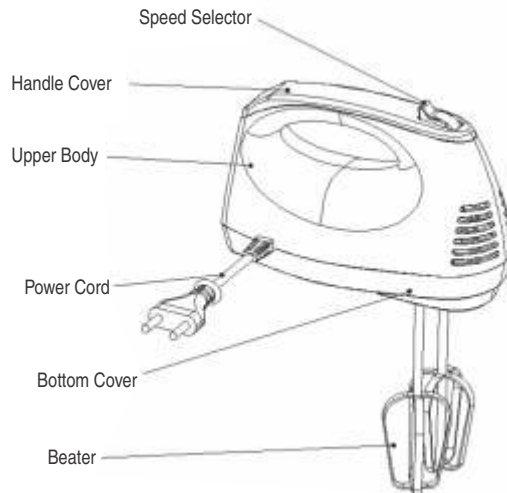

USING YOUR HAND MIXER

- For the first use, cleaning the beaters.
- Assemble beaters into mixer. Beaters are used for beating eggs or similar food.

Note: Beaters can be inserted in either socket.

- Ensure that the unit is at the 0 setting, then plug in the power source.
- Turn the speed selector to your desired setting, there is 5 setting. The appliance will start working.

Warning: Do not stick knife, metal spoons, fork and so on into bowl when operating.

- The max operation time per time shall not exceed 3 minutes. Minimum 20

minutes rest time must be maintained between continuous two cycles.

- When mixing is completed, turn the speed selector to 0 position, unplug the cord from power outlet.
- If necessary you can scrape the excess food particles from the beaters by rubber or wooden spatula.
- Hold the beaters with one hand and press the Ejection button firmly down with the other hand, remove the beater.

Note: Remove the beaters only at the 0 setting. Never pressing the Ejector button when the appliance is operating.

CLEANING AND MAINTENANCE

- Unplug the appliance and wait it completely cool down before cleaning.
- Wipe over the outside surface of the head with a dampened cloth and polish with a soft dry cloth.
- Wipe any excess food particles from the power cord.
- Wash the beaters in warm soapy water and wipe dry. The beaters may be washed in the dishwasher.

Caution: the mixer cannot be immersed in water or other liquid.

COOKERY TIPS

Refrigerated ingredients, such as butter and eggs, should be brought at room temperature before mixing begins.

- To eliminate the possibility of shells in your recipe, break eggs into separate container first, then add to the mixture.
- Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe.
- Temperature of ingredients and their texture variation, vary the required mixing time and results.
- Always start mixing at lower speed. Gradually increase to the recommended speed as stated in the recipe.

SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always allow adequate air space above and on all sides for air circulation. Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Never eject beaters when the appliance is in operation.
- Avoid contact with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.
- Remove beaters from mixer before washing. Do not place on or near a hot gas or electric burner or in a heated oven.
- To Protect against risk of electrical shock, do not put the body in water or other liquid.