

WARRANTY

This GLEN Pop-up Toaster is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

SPECIFICATIONS

Supply Voltage : 220V-240V~50Hz
Power : 750 W

Glen Appliances Pvt. Ltd.,
Customer Care
I-34, DLF Ind. Area, Phase-I,
Faridabad, India.
Helpline : 0129-2254191
E-mail : info@glenindia.com
Website : www.glenindia.com

+2 Years Extended Warranty

Here comes another Glen advantage !
Now you can register yourself for a free +2 Years Extended Warranty on the appliance you just purchased to get that enhanced peace of mind.

To avail this offer :

- Log on to www.glenindia.com and click on the +2 Years Extended Warranty icon.
- An application form will pop up.
- Please fill the details, the product name, the model number, the serial number, date of purchase, Invoice number, dealer name and your personal details.
- Please ensure that all details filled are correct and match with the Invoice and the product purchased.
- Press submit. A confirmation e-mail will be sent on your e-mail ID. Keep a print of the confirmation safely along with the original Invoice to use the +2 Years Extended Warranty anytime in future.

Note : The +2 Years Extended Warranty offer is absolutely free. The offer is available only for 90 days from the date of purchase of the appliance. In case the same is not availed it lapses automatically.

As the offer is free of cost the company is not obliged to refund or return any claims in lieu for the same.

PRODUCT NAME POP-UP TOASTER GL 3019

DATE OF PURCHASE _____

SERIAL NO. _____

DEALER'S STAMP & SIGNATURE

GLEN

Live Better !


USER'S GUIDE

POP-UP TOASTER

GL 3019



IDENTIFY YOUR TOASTER GL 3019

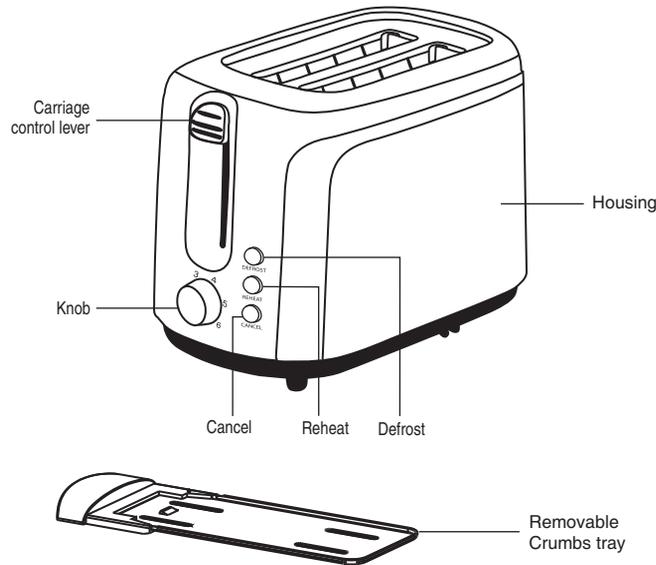

USING YOUR TOASTER

- Position the toaster on a dry, stable level work surface.
- Insert the plug into a suitable mains supply socket and switch ON the power.
- Insert the bread into the bread slots.
- Select the desired browning setting; Colour setting ranges from 1 (lightest) to 6 (darkest). The browning results may vary with the temperature of the bread, the thick-ness or the moisture content of the bread or the input voltage. When using the toaster for the first time, select setting 3.
- Press the carriage control lever down until it locks into place. The toasting cycle will automatically commence when the toasting carriage control lever is locked into place. Once the set browning level is achieved the lever is automatically raised and the toasts pop-up. The toasting cycle can be stopped at any time by pressing the CANCEL button.
- Remove the toast taking care not to touch any hot surfaces. In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the supply socket and disconnect

the plug. Allow the toaster to cool fully before carefully easing out the bread ensuring that you do not damage the element.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots and select the desired browning setting. Press the toasting carriage control lever down until it locks into place then press the DEFROST button.

REHEATING TOAST

The toaster allows you to reheat toast without additional toasting. To reheat, place the toast into the bread slots, lower the carriage control lever until it locks into place and press the REHEAT button.

CANCEL BUTTON

The CANCEL button can be pressed at any point during the toasting cycle to cancel the operation of the toaster.

SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always allow adequate air space above and on all sides for air circulation. Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- Always turn the power off, remove the plug and allow the toaster to cool before cleaning.
- To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace the tray before using again.
- Wipe the outside of the toaster with a barely damp cloth. Do not use steel wool pads or other abrasive cleaners. Do not immerse the unit, cord set or plug in water or liquid of any kind.
- To clean the interior, turn the toaster upside down and gently shake the crumbs free. The crumb tray should be cleaned regularly. Do not allow crumbs to accumulate in the bottom of the toaster.