

# GLEN

Live Better !

## USER'S GUIDE



### MULTI SNACK MAKER

GL 3027 / 3027 DX

### IDENTIFY YOUR MULTI SNACK MAKER GL 3027 / 3027DX



### USING YOUR MULTI SNACK MAKER

- Before using the multi snack maker clean the non-stick plates with a damp cloth or sponge.
- Preheat the multi snack maker, before using. For pre-heating close the sandwich maker and switch ON the power. The red light glows indicating the power ON and the green light glows indicating the preheating function. The green light goes OFF to mark the end of preheating. Now the multi snack

maker is ready for use.

- Grease the cooking plate with edible oil and place the prepared food. During cooking the light will go on/off.

#### Toasting Sandwiches

- When the light turns off place the sandwiches to be toasted on the plates and close the lid, tighten the handles. Cook for 3-4 min until they are crisp and ready to serve.

### Making Waffles

(waffle plate is provided only with DX model)

- When the light turns off. Spread the mixture onto the waffle plate covering the entire area, without spilling it over the sides.
- Close the appliance, wait for 10 seconds, turn the appliance upside down to allow the batter to spread evenly and cook uniformly. Keep it in this position for 2 min, re-turn and allow to cook for 2 more mins. Do not open the lid when cooking.
- Place the waffles over a grid and allow to cool for a minute before serving to make them more crispy.

### SAFETY PRECAUTIONS

- Always allow adequate air space above and on all sides for air circulation. Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- Do not touch the protruding part of the plates (marked HOT) till the time it is cooled. For changing plates when hot, use a damp cloth.
- Always turn the power off, remove the plug and allow the appliance to cool before cleaning.
- Butter the outer side of the bread to obtain a golden brown toasting.

### Grilling

- Use the two grill plates. Place the meat / vegetable to be grilled on the plates, close the appliance and allow to cook as per the cooking time.

### Changing the Plates

- Unplug the cord and ensure that the appliance is cool. Open the appliance.
- To remove the plates push the single latch towards the exterior to unlock and remove the plate by picking from the sides.
- To lock the plate back in position pull the latch towards the exterior, place the plate and release the latch.

- Do not use any metallic or sharp objects for scratching the plates, as this could damage the teflon coating.
  - Do not allow children to use the appliance or touch the appliance when in use.
  - Wipe the plates and body of the appliance with a cloth rinsed in hot water and washing liquid.. Do not use steel wool pads or other abrasive cleaners.
- Do not immerse the unit, cord set or plug in water or liquid of any kind.
- The multi snack maker can be easily stacked vertically to save space when it is not in use.

## WARRANTY

This GLEN Multi Snack Maker is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

PRODUCT NAME : MULTI SNACK MAKER GL 3027 / 3027DX

DATE OF PURCHASE : \_\_\_\_\_

SERIAL NO. : \_\_\_\_\_

DEALER'S STAMP & SIGNATURE

**Glen Appliances Pvt. Ltd.**, I-34, DLF Ind. Area, Phase-I, Faridabad, India.  
Helpline : 0129-2254191  
E-mail : [info@glenindia.com](mailto:info@glenindia.com) Website : [www.glenindia.com](http://www.glenindia.com)