

## WARRANTY

This GLEN Travel Kettle is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if:

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

### SPECIFICATIONS

Power Supply :  
110 V / 240 V AC 650 W  
Capacity : 0.5 litre

**Glen Appliances Pvt. Ltd.,  
Customer Care**  
I-34, DLF Ind. Area, Phase-I,  
Faridabad, India.  
Helpline : 0129-2254191  
E-mail : [info@glenindia.com](mailto:info@glenindia.com)  
Website : [www.glenindia.com](http://www.glenindia.com)

## +2 Years Extended Warranty

Here comes another Glen advantage !  
Now you can register yourself for a free +2 Years Extended Warranty on the appliance you just purchased to get that enhanced peace of mind.

### To avail this offer :

- Log on to [www.glenindia.com](http://www.glenindia.com) and click on the +2 Years Extended Warranty icon.
- An application form will pop up.
- Please fill the details, the product name, the model number, the serial number, date of purchase, Invoice number, dealer name and your personal details.
- Please ensure that all details filled are correct and match with the Invoice and the product purchased.
- Press submit. A confirmation e-mail will be sent on your e-mail ID. Keep a print of the confirmation safely along with the original Invoice to use the +2 Years Extended Warranty anytime in future.

**Note :** The +2 Years Extended Warranty offer is absolutely free. The offer is available only for 90 days from the date of purchase of the appliance. In case the same is not availed it lapses automatically.

As the offer is free of cost the company is not obliged to refund or return any claims in lieu for the same.

PRODUCT NAME TRAVEL KETTLE GL 9009

DATE OF PURCHASE \_\_\_\_\_

SERIAL NO. \_\_\_\_\_



DEALER'S STAMP & SIGNATURE

# GLEN


Live Better !

## USER'S GUIDE TRAVEL KETTLE

  GL 9009

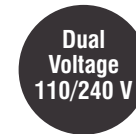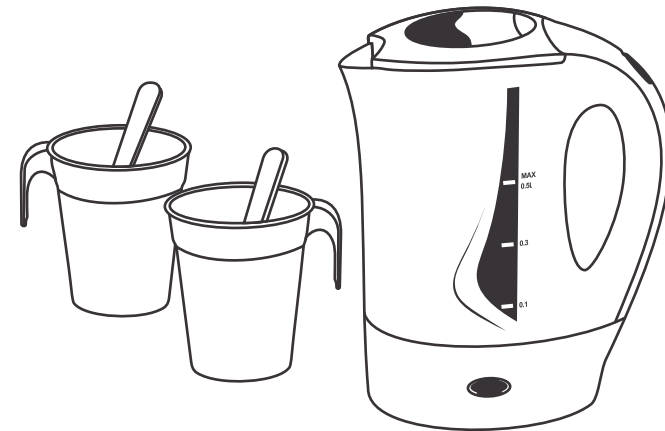


## IDENTIFY YOUR TRAVEL KETTLE GL 9009

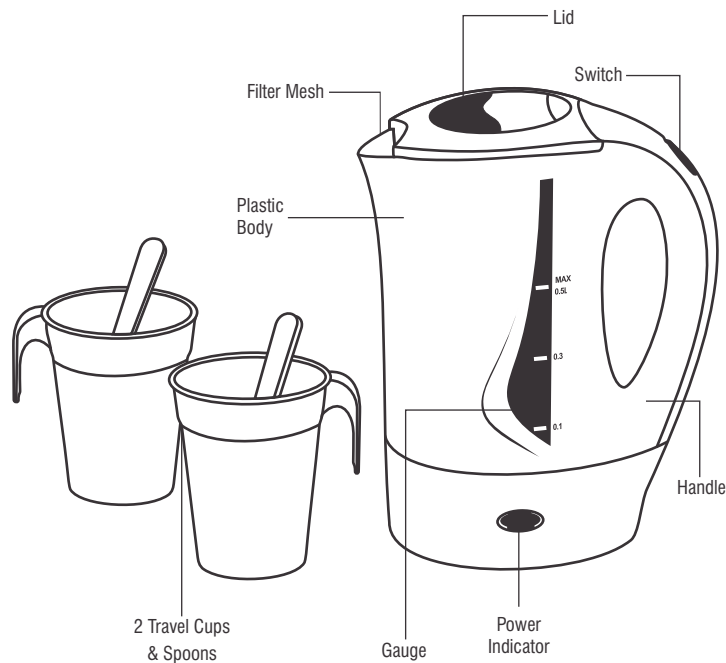 

**Note :** The travel kettle is designed to work on both 110 & 220 V supply. To set the kettle as per available power supply, adjust the voltage selector provided at the bottom of the kettle, as shown in the figure.

**Please be careful not to operate at 240V with selector at 110V. In this case the kettle will get damaged and the same will not be covered under warranty.**

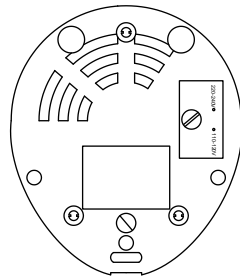 

## USING YOUR TRAVEL KETTLE

- To open the lid press the button and lift upward. To close press down the lid firmly.
- Remove all packaging, stickers or other accessories from the inside and outside of the kettle.
- Adjust the length of the cord by winding it under the base. Wedge the cord in the slot.
- Place the kettle on a clean, cool and smooth surface.
- Fill the kettle with the required amount of water. Connect to the mains and turn on the switch. The LED indicator glows.
- The kettle will turn off automatically once the water has boiled.
- Ensure that the kettle has stopped automatically or turn it off manually before pouring the hot water in the cups.

## SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place the kettle on or near slippery or hot surfaces.
- The kettle must be used with its original base only.

## Cleaning

- Unplug the kettle and allow to cool down, then clean with a soft damp sponge.
- Never immerse the kettle in water.
- Never use abrasive cleaning pads.
- The kettle is provided with a removable mesh filter. Remove and clean the filter under running tap water.

## Descaling

- Descale the kettle once a month.
- To descale, fill the kettle with half a litre of vinegar and leave it to stand for 2 hours without heating.
- Any spots remaining inside can be cleaned up with a damp cloth.
- After descaling empty and rinse the kettle 5-6 times before using. Repeat if necessary.

- Use the kettle only for boiling water.
- Do not fill it above the maximum level or below the minimum level.
- Do not use the kettle without water.
- Never lift the lid when the kettle is in function.
- When using the kettle for the first 2-3 times, throw away the water because it may not be very clean.
- When the kettle is not in use, ensure that the power is off.