

WARRANTY

This GLEN Tea Maker & Kettle is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

SPECIFICATIONS

Power Supply : 240V AC 50 Hz 2000W

Capacity : 1.7 litre

Packing list : Kettle Base, Glass Kettle,
S.S lid with Knob, S.S lid with filter assy.

Glen Appliances Pvt. Ltd., Customer Care

I-34, DLF Ind. Area, Phase-I,
Faridabad, India.

Helpline : 0129-2254191

E-mail : info@glenindia.com

Website : www.glenindia.com

+2 Years Extended Warranty

Here comes another Glen advantage !
Now you can register yourself for a free
+2 Years Extended Warranty on the
appliance you just purchased to get that
enhanced peace of mind.

To avail this offer :

- Log on to www.glenindia.com and click on the +2 Years Extended Warranty icon.
- An application form will pop up.
- Please fill the details, the product name, the model number, the serial number, date of purchase, Invoice number, dealer name and your personal details.
- Please ensure that all details filled are correct and match with the Invoice and the product purchased.
- Press submit. A confirmation e-mail will be sent on your e-mail ID. Keep a print of the confirmation safely along with the original Invoice to use the +2 Years Extended Warranty anytime in future.

Note : The +2 Years Extended Warranty offer is absolutely free. The offer is available only for 90 days from the date of purchase of the appliance. In case the same is not availed it lapses automatically.

As the offer is free of cost the company is not obliged to refund or return any claims in lieu for the same.

PRODUCT NAME TEA MAKER & KETTLE GL 9010

DATE OF PURCHASE _____

SERIAL NO. _____

DEALER'S STAMP & SIGNATURE

GLEN


Live Better !

USER'S GUIDE TEA MAKER & KETTLE

GL 9010



IDENTIFY YOUR TEA MAKER & KETTLE GL 9010

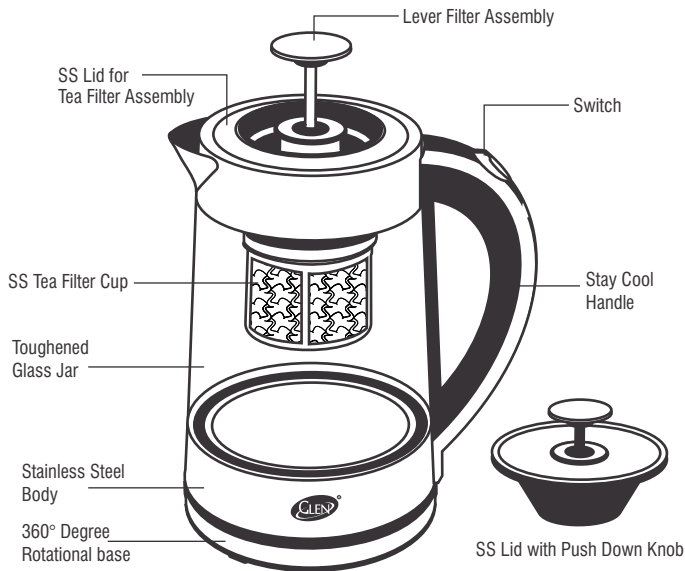

USING THE KETTLE

- To open the lid press the push down knob and lift upward. To close press down the lid firmly.
- Remove all packaging, stickers or other accessories from the inside and outside of the kettle.
- Adjust the length of the cord by winding it under the base. Wedge the cord in the slot.
- Place the kettle on a clean, cool and smooth surface.
- Fill the kettle with the required amount of water. Connect to the mains and turn on the switch. The LED indicator glows
- The kettle will turn off automatically once the water has boiled.
- Ensure that the kettle has stopped

automatically or turn it off manually before pouring the hot water in the cups.

USING AS A TEA MAKER FOR BREWING TEA

- Remove the glass jar from the power base and remove the lid.
- Fill with the desired amount of water. Ensure you do not fill past the tea maximum mark (1.7 L)

Note : Filling past the 'max' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'min' line will result in the tea maker switching off before the water has boiled or reached the selected temperature.

- Unlock the SS filter cup of the filter assembly.
- Add tea leaves as per requirement. (refer table below)

Water to Tea Scoop Ration

Glass Jug Marking	Cups	Tea Scoops
500 ml	Approx 2 Cups	2 Scoops
750 ml	Approx 3 Cups	3 Scoops
1000 ml	Approx 4 Cups	4 Scoops
1200 ml	Approx 5 Cups	5 Scoops

- Lock the filter cup in position. Ensure it is tightly secured.
- Place the filter assembly on the glass jar. Make sure the lid is firmly locked.
- Place the jar on the base. Switch on the tea maker.
- Let the water heat, as it begins to roar gently, lower the filter cup using the lever, to dip it in water. Allow the tea to brew as per desired time. You can lift

and lower the lever during his period to allow for better infusion.

- Once complete, lift the lever to raise the cup above the water level. Pour into cups and serve with sugar, lemon or milk to taste.

Cleaning

- Unplug the kettle and allow to cool down, then clean with a soft damp sponge.
- Never immerse the kettle in water.
- Never use abrasive cleaning pads.

Descaling

- Descale the kettle once a month.
- To descale, fill the kettle with half a litre of vinegar and leave it to stand for 2 hours without heating.
- Any spots remaining inside can be cleaned up with a damp cloth.
- After descaling empty and rinse the kettle 5-6 times before using. Repeat if necessary.

SAFETY PRECAUTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place the kettle on or near slippery or hot surfaces.
- The kettle must be used with its original base only.
- Use the kettle only for boiling water or brewing tea.
- Extreme caution must be used when moving the Glass Jar containing hot liquid.
- Do not use the kettle without water.
- Never lift the lid when the kettle is in function.
- When using the kettle for the first 2-3 times, throw away the water because it may not be very clean.
- When the kettle is not in use, ensure that the power is off.