

### SPECIFICATIONS\*

Voltage	: 230 V Ac 50 Hz	Speed Control	: ON/OFF - PULSE 1-Low, 2-Medium, 3-High
Power	: 500 W	Weight (Juicer)	: 3.60 Kgs. appx.
Rating	: 30 Minutes	Weight (J.M.G.)	: 5.10 Kgs. appx.
Motor	: Universal	Carton Dimensions	: 375 x 250 x 330 (mm) (L x D x H) (JUICER)
Material (Basic Unit)	: A.B.S.	Carton Dimensions	: 505 x 250 x 330 (mm) (L x D x H) (J.M.G.)
(Liquidiser Jar)	: SAN	Capacity Liquidiser Jar	: 1.5 Ltrs.
(Grinder Jar)	: Stainless Steel	Grinder Jar	: 0.6 Ltrs.
(Chutney Jar)	: Stainless Steel	Chutney Jar	: 0.3 Ltrs.
Motor Speed (RPM)	: 18000 appx. No Load		

\*Subject to change without prior notice.

### PACKING LIST

GL 4015 - JU (JUICER)	GL 4015 (JUICER MIXER GRINDER)
Juicer (Main Unit)	Juicer (Main Unit)
Spatula	Liquidiser Jar
Pusher	Grinder Jar
Spout Cover	Chutney Jar
User's Guide.	Spatula
	Fruit Filter
	Pusher
	Spout Cover
	User's Guide.

### WARRANTY

This GLEN JMG GL 4015 / JUICER GL 4015-JU is fully warranted against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. The motor is fully warranted against any manufacturing defect for a period of five years from the date of manufacturing (inscribed on the motor). Should any defect develop in this product, the customer should bring the product to the nearest authorised service centre, where the company undertakes to get the product repaired free of charge.

This warranty is not valid if :

- The use and care instructions have not been followed.
- Defects are caused by accident, misuse, abuse or commercial use.
- The repair work is carried out by persons not authorised by the company.
- Any modification or alteration of any nature is made in the product.
- Normal wear & tear of the product is not covered under warranty
- The Bill/Cash memo and copy of warranty card is not presented.

Under no circumstances, whether based on limited warranty or otherwise shall the company be liable for incidental, special or consequential damages. Use of product indicates acceptance by you of the aforesaid terms and conditions.

PRODUCT \_\_\_\_\_

SERIAL NO : \_\_\_\_\_

BILL NO. & DATE : \_\_\_\_\_

NAME OF OWNER : \_\_\_\_\_

ADDRESS : \_\_\_\_\_

DEALER'S STAMP & SIGNATURE




**Glen Appliances Pvt. Ltd.**  
EPIP, Phase-II, Thana Baddi, Tehsil Nalagarh, Distt. Solan (H.P.)


**HEAD OFFICE**  
I-34, DLF Indl. Area, Phase 1, Faridabad (Haryana)  
Customer Care No.: 0129-2254191 Fax : 0129-2274344  
E-mail : info@glenindia.com Website : www.glenindia.com



**USER'S GUIDE**





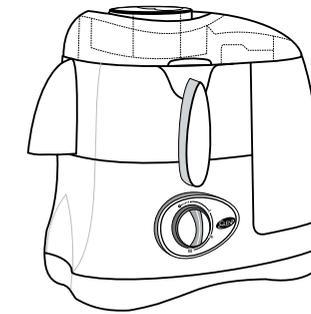


**JUICER GL - 4015 JU**

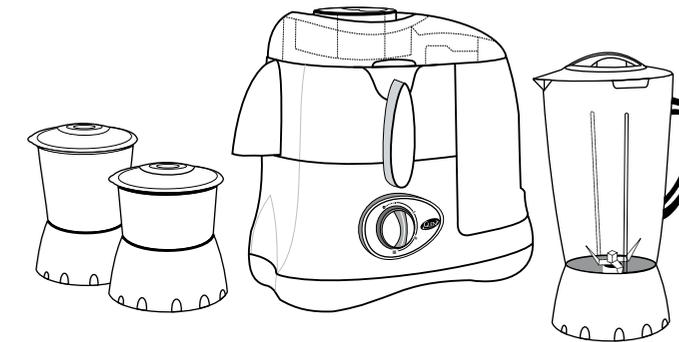

**JUICER MIXER GRINDER GL - 4015**

## IDENTIFY YOUR JUICER MIXER GRINDER GL 4015 / JUICER GL 4015 - JU






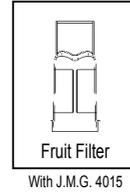
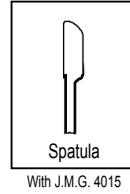
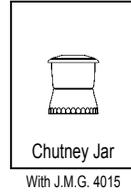
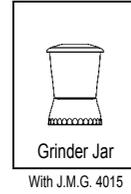
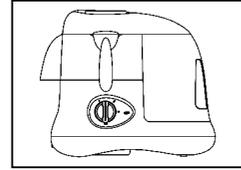


### USING THE JUICER

- Mount the juicer body & pulp collector on the basic unit.
- Place the juicer mesh into the juicer body. Ensure that the mesh sits properly and locks the lower coupler of the basic unit. If necessary push down slightly or rotate the mesh a little. Don't apply any undue pressure. The mesh is a very fine and precisely balanced component.
- Slide the juicer spout (outlet) cover in position and press.
- Mount the juicer cover onto the juicer body and lock the clamps, plug the cord in and the juicer is ready for use. Press the switch marked 'pulse' to check if the filter mesh assembly is properly seated with the lower coupler of the basic unit. The mesh should spin evenly without wobbling. Wash ingredients and cut Suitably to fit feeder opening.
- Place a glass under the spout. Set switch to position "1".
- Push ingredients into the feeder with the food pusher.



### USING THE LIQUIDISER JAR / DRY GRINDER / CHUTNEY JAR

        - Check that the blade assembly of the Jar rotates freely.
- Place the Jar over the Coupler on the Basic Unit. Turn clockwise to lock.
- Cover the Jar with the Lid after putting the ingredients.
- Switch on the machine. To start with, press switch no. 1 and

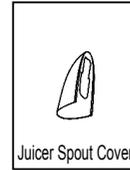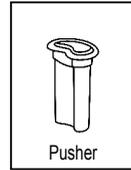

then for higher Speeds move on to speed No. 2 and 3. (for additional froth for Lassi, Cold Coffee use the Pulse switch).

  - To remove the Jar, switch off the machine & turn the Jar gently in anti-clockwise direction.






### FRUIT FILTER

- The Glen fruit filter is used for juicing soft seeded fruits like water melon, grapes etc. It can also be used to make tomato purees. Coconut milk coconut can also be extracted using the fruit filter. Blender jar without fruit filter is used for blending / liquidising applications.



### USING THE FRUIT FILTER

   - Insert the fruit filter into the blender jar and rotate it slightly so that it settles down and the grooves get locked with the slugs on the blender jar wall.
- Place the lid on the jar (Drainage windows of lid towards jar spout) and rotate it anti-clockwise to lock.
- Place the assembly onto the drive shaft of the juicer mixer grinder and rotate clockwise to lock it into position.
- Cut small pieces of fruits (like watermelon, tomato etc.) to be juiced. Remove the cap on the lid by rotating anticlockwise. Put the cut pieces into the filter and switch on the juicer mixer grinder. You can continue adding more fruit pieces from the centre opening in the lid as they are juiced. The juice is sieved out through the filter and the pulp/seeds get accumulated inside the filter.
- Once the juicing is over, replace the cap. Remove the jar assembly from the drive shaft and pour out the contents from the jar by tilting.



### CLEANING THE LIQUIDISER JAR

  
- After use unlock the Jar and pour out the contents & put it back over the Coupler on the Basic Unit.
- Fill 1/3 of the Jar with warm water, add little liquid soap. Fix the Lid & run the machine for about 30 seconds by pressing speed No. 1 Switch OFF and unplug the machine.
- Pour out the soap water & unscrew the Goblet by rotating anti-clockwise and wash the Jar in running tap water.



- Wipe the screw area with a wet cloth and then with dry cloth.
- Wipe clean the rubber gasket and blade assembly and refit the Goblet Seat on the Liquidiser Jar. Ensure that the rubber gasket is put on top/ bottom of the blade assembly before tightening the Jar with Goblet Seat.


### CLEANING THE GRINDER JAR / CHUTNEY JAR / FRUIT FILTER

 - Pour a little soap and water into the jar, close the lid and run it on position 1 for few seconds. Pour out the soap solution and rinse with tap water.
- Alternatively use a soft brush to clean the filter under running tap water.



### OVER LOAD PROTECTION

 - To protect the motor from burning, in case of overload, the appliance is fitted with an automatic overload protector under the base of the basic unit. If the motor stops it is an indication of excess load. Switch off the unit, take out excess material from the jars. Wait for 2/3 minutes and press the overload protection plunger. Then restart the unit.  
Note : Overload protection plunger is to be pressed to restart only after 2/3 minutes.



### STEPS TO SAFETY

- While grinding always ensure that the blades are covered by the substance to be ground. Give a break of atleast one minute after continuous Dry Grinding of 3 minutes.
- Fill the blender Jar only upto 1/4th of its capacity and add required amount of water or milk so that the blades don't get jammed.
- Fill the Jar only 3/4th of its capacity to avoid spilling of liquid, when you start the machine.
- Do not allow children to handle the JMG / Juicer. Keep the machine away from direct heat and sunlight, at a suitable height on a flat surface for easy operation.
- Do not use the JMG for ice crushing or grinding raw Meat.
- Before running the machine ensure that the mesh assembly, jars and lids are firmly placed and locked. Do not remove or replace jars when the motor is on.
- While operating run the machine in short cycles of 30-90 second as per requirement, do not run it for a long duration.
- Clean the mesh with a soft nylon brush. Do not use any metallic object or knife etc.
- Wide voltage fluctuations during operation may affect the quality of grinding, the motor may still be safe. It is safer to use a JMG / Juicer only when you get Steadier voltage in your area.
- While dry grinding the jar may get heated up due to friction. Don't worry it has nothing to do with the motor.
- Do not overload or run the Machine empty, In case of smoke or smell put off the machine & call Glen customer care.