

TECHNICAL SPECIFICATIONS

Air Flow	750 M³
Motor Wattage	100W
Housing	FRP Flame Retardant Plastic
Lamps	Incandescent
Wattage (each)	40W
Speed Controls	SL (3 Speed Sliding)
Filters	BF Stainless Steel Baffle Filter

Based on the features as mentioned in the model you have selected the specifications will be different. Please note as improvements are a continuous process specifications are subject to change.

GUARANTEE

Glen Appliances Pvt. Ltd. guarantees to get the product or any part thereof repaired free of charge for a period of one year from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the plastic breakable parts, lamps, push buttons, filter locks, and items subject to normal wear and tear due to operation are not covered under guarantee.

Terms to Guarantee

- * The Bill/Cash Memo should be presented.
- * No repair work should be carried out by any unauthorised person.
- * Product should be used as per the directions given in the user's guide.
- * Any defects caused by improper or reckless use are not covered under guarantee.
- * The Serial No. Has not been tampered with.
- * No modification/alteration of any nature is made in the Product.

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

Packing List : Main unit, spigot, plastic wall plugs, screws

PRODUCT

SERIAL NO : _____

BILL NO. & DATE : _____

NAME OF OWNER : _____

ADDRESS : _____

DEALER'S STAMP & SIGNATURE



Glen Appliances Pvt. Ltd.

 
 
 
EPIP, Phase-II, Thana Baddi, Tehsil Nalagarh, Distt. Solan (H.P.)

HEAD OFFICE

I-34, DLF Indl. Area, Phase 1, Faridabad (Haryana)
Customer Care No.: 0129-2254191 Fax : 0129-2274344
E-mail : info@glenindia.com Website : www.glenindia.com



CHIMNEY HOOD USER'S GUIDE

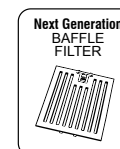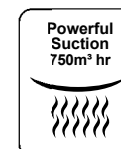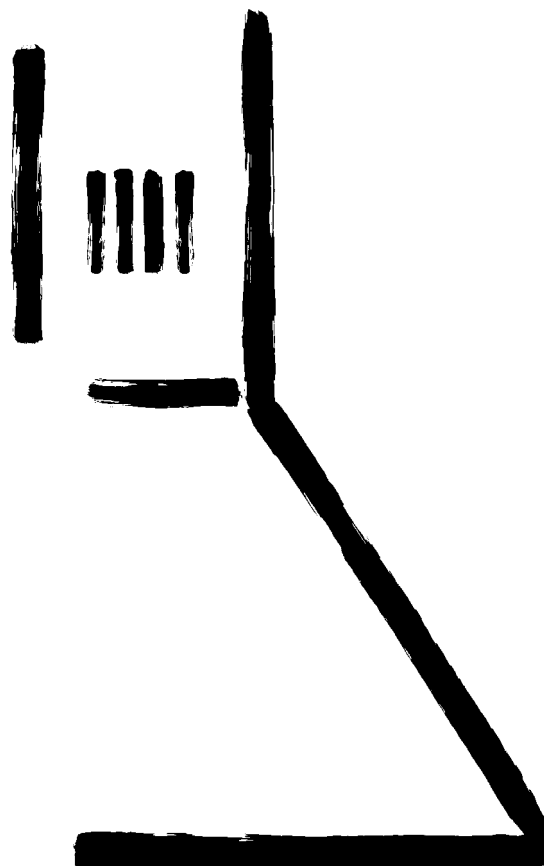

Features may vary with individual models. See product brochure for more details.

INSTALLATION

The chimney must be mounted over the center of the cooking area. The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.

Join the two parts of the spigot (some models may have a single piece) attach it to the hood using the four screws. In a few models the spigot may already be mounted.

Fastening the chimney to the wall

Mark the position of the holes on the wall. Before drilling make sure that no wiring and tube will be damaged. Drill two fastening holes, drive in the wall plugs and screw in the screw until their heads are about 6 mm from wall.

Place the chimney to the wall in order to check that it seats properly. Then mark the position of the two holes. Take it off from the wall now, drill the holes and fit the plugs.

Place the hood once again to the wall, and introduce the screws from the inside of the appliance.

The product can be used in re-circulation or the exhaust mode. It is however recommended that wherever possible it should be used in exhaust mode for best results.

Exhaust mode

The chimney must be connected by the spigot (supplied as part of the hood) to a duct to vent all the exhausted air outside the kitchen. Over horizontal areas, if any, the duct must be slanted about 10% downwards.

The maximum recommended length of ducting is 10 feet with a maximum of two bends. The suction power of the chimney considerably decreases in case the length of the duct and number of bends increases further.

Re-circulation mode (Available in select model)

This mode is used when no exhaust duct to the outdoors is available. The air is purified by an active carbon filter and recycled into the room.

The carbon filter is an optional attachment and must be procured in this case.

 
 
Remove the metal filters. Insert the carbon filters and rotate it to lock at the side of the hood. For effective functioning the carbon filters need to be replaced after 3-4 months.

Installing the duct cover

Fix the bracket with 2 plugs and screw at the required height for the duct cover.

Electric connection

Make sure that the supply voltage rating correspond with the specifications provided in the User's Guide.

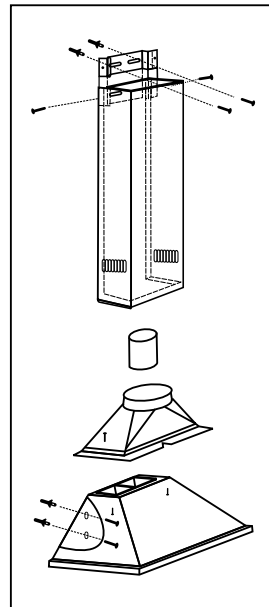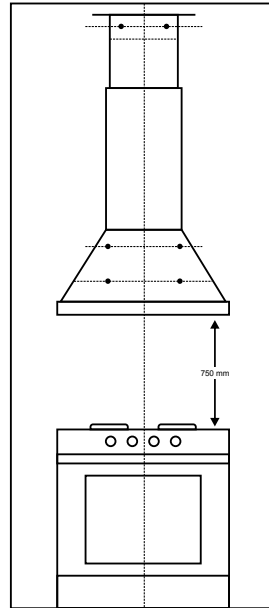


USAGE

Switch on the chimney 5 minutes before you start cooking. Before using the chimney please ensure that all plastic films on the filter and stainless steel body are removed.

The push button/slider control have three speed settings. Kindly choose the speed as per your requirement.


Light

 Two 40 watt lamps are provided in the chimney to enable proper lighting up of the cooking area. The light works independently of whether the fan is switched on or off, as it is provided with separate on/off switch.

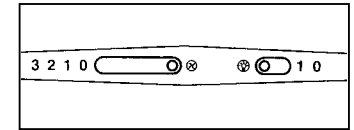

MAINTENANCE

 - * When performing maintenance operations, disconnect the plug from the socket.
- * The efficiency of the chimney depends on the condition of the filters.
- * The filters should be washed as often as possible but at least once in 10 to 15 days in normal operating conditions.

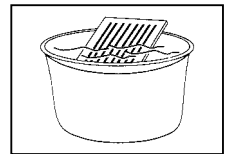

- * The baffle & aluminium filters can be removed easily by unlocking. To remove the aluminium layer filter unlock and drop down the hood bottom cover, remove the wire supports carefully and take out the filter.
- * Dip the filter for 10-15 minutes into a boiling hot soap solution and then wash in running water. Dry and reinstall the filter.
- * The chimney surface should be cleaned with a damp cloth. No abrasive chemicals should be used.

DO'S & DON'T'S

- * No flame based cooking should be done below the chimney.
- * While frying do not leave the cooking oil unattended as it may flare up and cause fire.
- * Clean all the oily residues on surface frequently to avoid fire.
- * The minimum distance between the cooktop and the bottom of the chimney must be 750 mm.
- * Make sure that the supply voltage ratings correspond with the specifications provided in the User's Guide.
- * Before using the chimney for the first time please ensure that all plastic films on baffle filter and stainless body are removed.
- * Wash the filters as often as possible at least once in 10-15 days in normal operating conditions.
- * When performing maintenance operations, disconnect the plug from the socket.
- * No repair work should be carried out by any unauthorised person.
- * Chimney should be used as per the directions given in the User's Guide.
- * Do not allow children to operate the chimney.