

**TECHNICAL SPECIFICATIONS**

**A. BURNER RATINGS**

Model	Total Gas Rating		Small Burner		Big Burner		High Flame Burner		
	g/h	kcal/h	g/h	kcal/h	g/h	kcal/h	g/h	kcal/h	
GL 1016 SS	177	1930	-	-	1 x	177	1930	-	-
GL 1020 SS BB	320	3485	1 x	143 1555	1 x	177	1930	-	-
GL 1021 SS	320	3485	1 x	143 1555	1 x	177	1930	-	-
GL 1023 SS	320	3485	1 x	143 1555	1 x	177	1930	-	-
GL 1025 SS	320	3485	1 x	143 1555	1 x	177	1930	-	-
GL 1026 SS	320	3485	1 x	143 1555	1 x	177	1930	-	-
GL 1033 HF	542	5898	1 x	143 1555	1 x	177	1930	1 x	222 2413
GL 1035 HF	542	5898	1 x	143 1555	1 x	177	1930	1 x	222 2413
GL 1037 SS	497	5415	1 x	143 1555	2 x	177	1930	-	-
GL 1044 SS	640	6970	2 x	143 1555	2 x	177	1930	-	-
GL 1044 HF	685	7453	2 x	143 1555	1 x	177	1930	1 x	222 2413
GL 1046 SS	640	6970	2 x	143 1555	2 x	177	1930	-	-
GL 1046 HF	685	7453	2 x	143 1555	1 x	177	1930	1 x	222 2413

**B. OVERALL DIMENSION (mm)**

Width	Depth	Height	Approx. Wt. (Kg.)
340	450	115	3.50
620	330	110	4.50
700	360	155	6.00
650	350	120	5.00
620	365	110	4.80
660	400	115	5.50
730	440	105	8.50
720	440	110	8.50
720	465	110	8.50
595	565	110	8.50
595	565	115	8.50
595	565	115	8.50

Subject to change without prior notice

For Use with Commercial L.P.G. at 2.942 kN/m<sup>2</sup> (30gf/cm<sup>2</sup>)



**COOKTOP**  
USER'S GUIDE



Serial No. \_\_\_\_\_

Date of Purchase \_\_\_\_\_



**Glen Appliances Pvt. Ltd.**

EPIP, Phase-II, Thana Baddi, Tehsil Nalagarh, Distt. Solan (H.P.)

HEAD OFFICE

I-34, D.L.F. Industrial Area, Phase-I, Faridabad (Haryana)

Customer Care No.: 0129-2254191 Fax : 0129-2274344

E-mail : info@glenindia.com Website : www.glenindia.com

DEALER'S STAMP & SIGNATURE

IS : 4246



CM/L - No. - 9206570

## **INSTALLATION**

- The gas cylinder should be placed vertically and should not tilt.
- The cooktop should be placed at a convenient working height against a wall. It should be kept away from shelves and curtains.
- Windows should be closed and the use of fans should be avoided during its operation.
- The flexible tube connecting the cylinder to the cooktop should be gas resistant and of an approved brand. It should not be longer than a meter and should be kept away from any source of heat. The tube should not be subjected to external pressure, twisted or sharply looped.
- When the cooktop is not in operation ensure that the regulating knobs on the cooktop are in the 'OFF' position and the regulating valve on the cylinder is 'CLOSED'.
- Push the rubber hose onto the inlet nozzle as far as it will go.

## **INSTRUCTIONS FOR USE**

- To light the cooktop, open the regulating valve, light a matchstick and hold it close to the burner port. Now press the corresponding regulating knob and turn it anticlockwise to the 'ON' position.
- To turn off the flame, turn the regulating knob to the 'OFF' position.  
During cooking, ensure that the ingredients being cooked do not overflow, which may extinguish the flame or choke the burner ports.
- In case of leakage of gas or any other defect, report to your gas dealer and get the cooktop checked/rectified by an authorised person only.
- Use a damp cloth to clean your Cooktop.

- Make sure that there are no inflammables near the cooktop
- When the cooktop is in use check from time to time that it burns normally.
- Do not close the lid when burners or electric plates are hot.

## **GUARANTEE**

This GLEN Cooktop is fully guaranteed against any defect arising out of defective materials or faulty workmanship for a period of one year from the date of purchase. Should any defect develop in this Cooktop during the guarantee period, Glen Appliances Pvt. Ltd. undertakes to get the Cooktop or any parts thereof repaired free of charge.

## **GUARANTEE IS NOT VALID IF**

- The Cooktop is not used according to the direction given in the instruction manual.
- Defects are caused by improper or reckless use.
- The repair work is carried out by persons not authorized by the Company.
- The serial no. has been deleted, defaced or altered.
- The Bill/Cash Memo is not presented.
- Any modification or alteration of any nature is made in the cooktop.

**The manufacturer is not responsible for any consequential losses arising out of misuse of the appliance or due to non-observance of necessary precautions in using L.P. Gas.**