


Pop-up-Toaster GL 3018

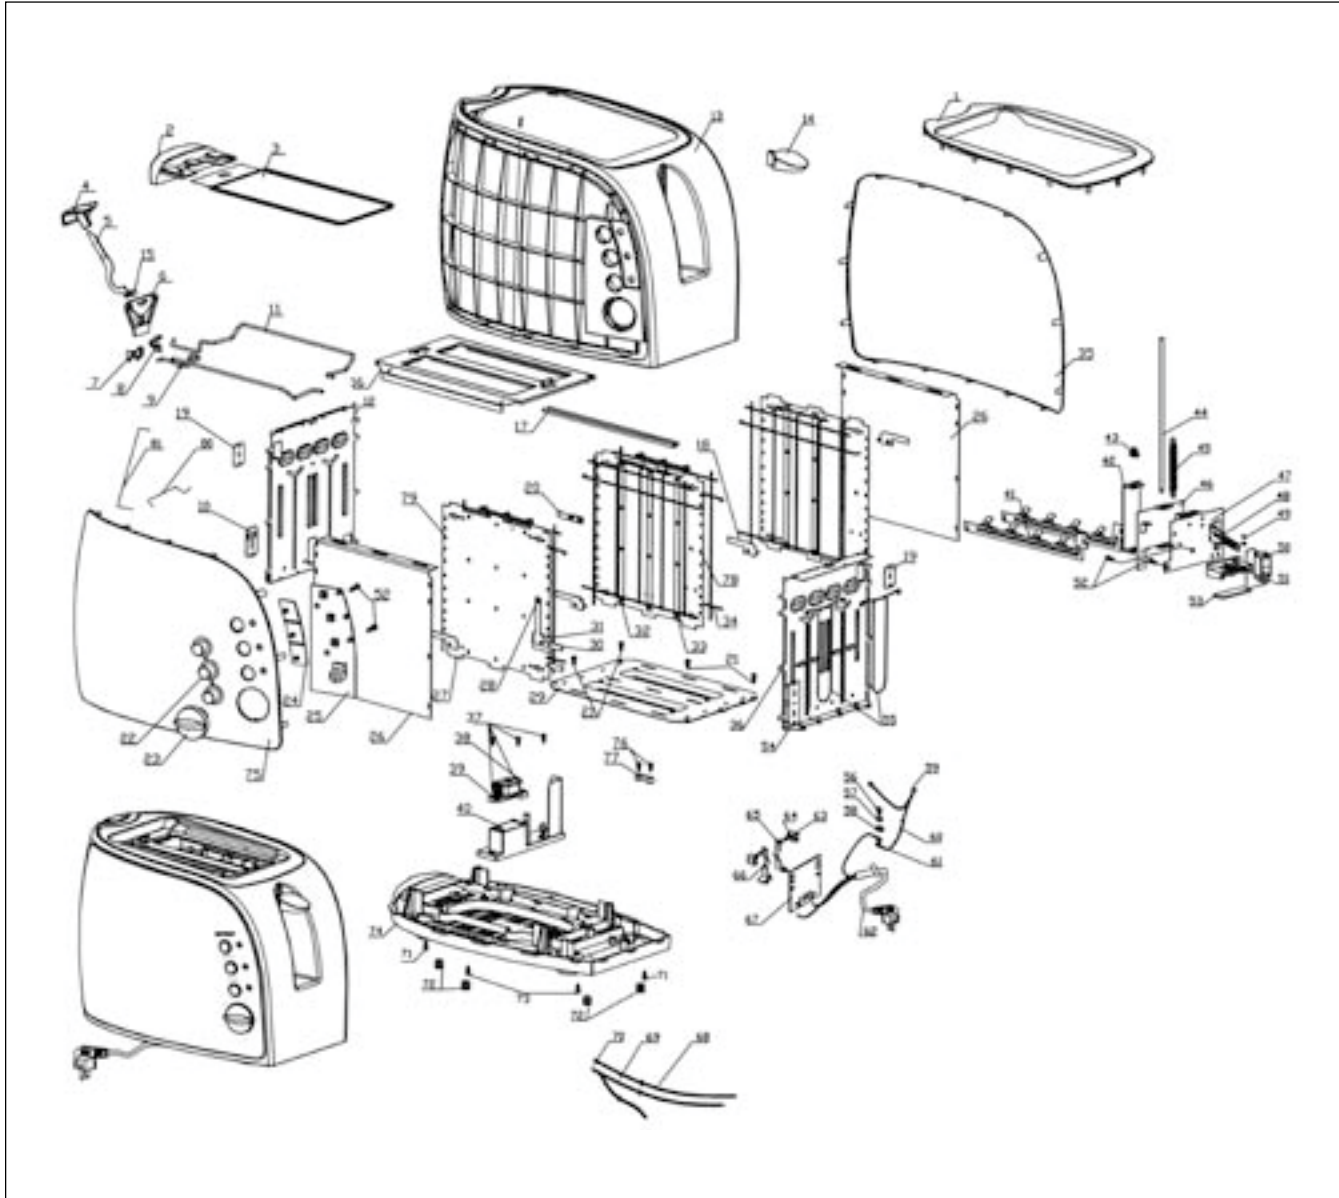

Pop-up-Toaster GL 3018		
Ref. No.	Spare Part Name	SAP Code
74	Base	50002631
29	Bottom Plate	50002626
22	Button	50002621
2	Crumb Tray Handle	50000369
26	Front Rear Plate	50002625
	Gift Box	50002634
14	Handle	50002617
5	Handle Bun Warmer	50002614
78/79	Heating Element	50002633
13	Housing	50002616
23	Knob	50002622
24	Lamp Cover	50002623
12	Left Side Plate	50002615
19/27	Mica Plate	50002620
25	Pcb Assembly	50002624
40	Pcb Support	50002628
36	Right Side Plate	50002627
72	Rubber Foot	50002630
67	Switch Pcb	50002629
17	Top Support	50002619
75	Trim Piece Front	50002632
1	Trim Piece Top	50002613
16	Upper Cover	50002618