


Pop-up Toaster GL 3019

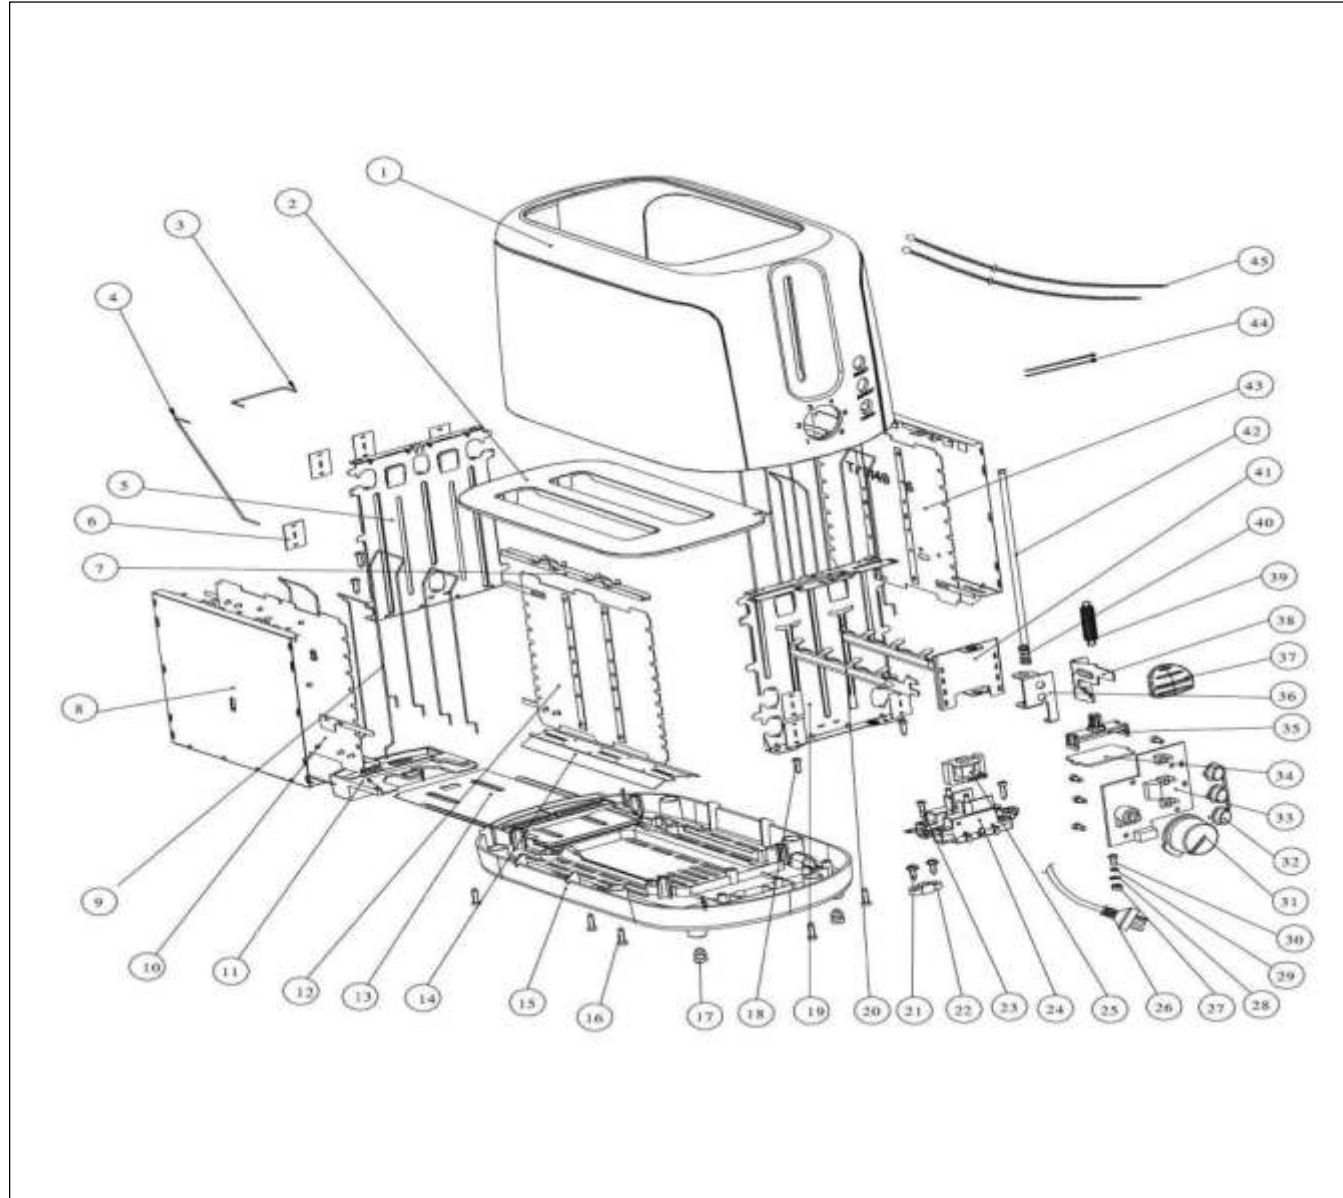

Pop-up Toaster GL 3019		
Ref. No.	Item Name	Sap Code
2	Upper Cover Plate	50003012
24	Switch Assy	50003013
25	Electromagnet Asm	50003014
26	Power Cord	40002058
31	Knob	50003015
32	Press Key	50003016
33	Control Pcb Asm	50003017
37	Carriage Handle	50003018
	lft Box	50003019