


Sandwich Maker GL 3027 DX

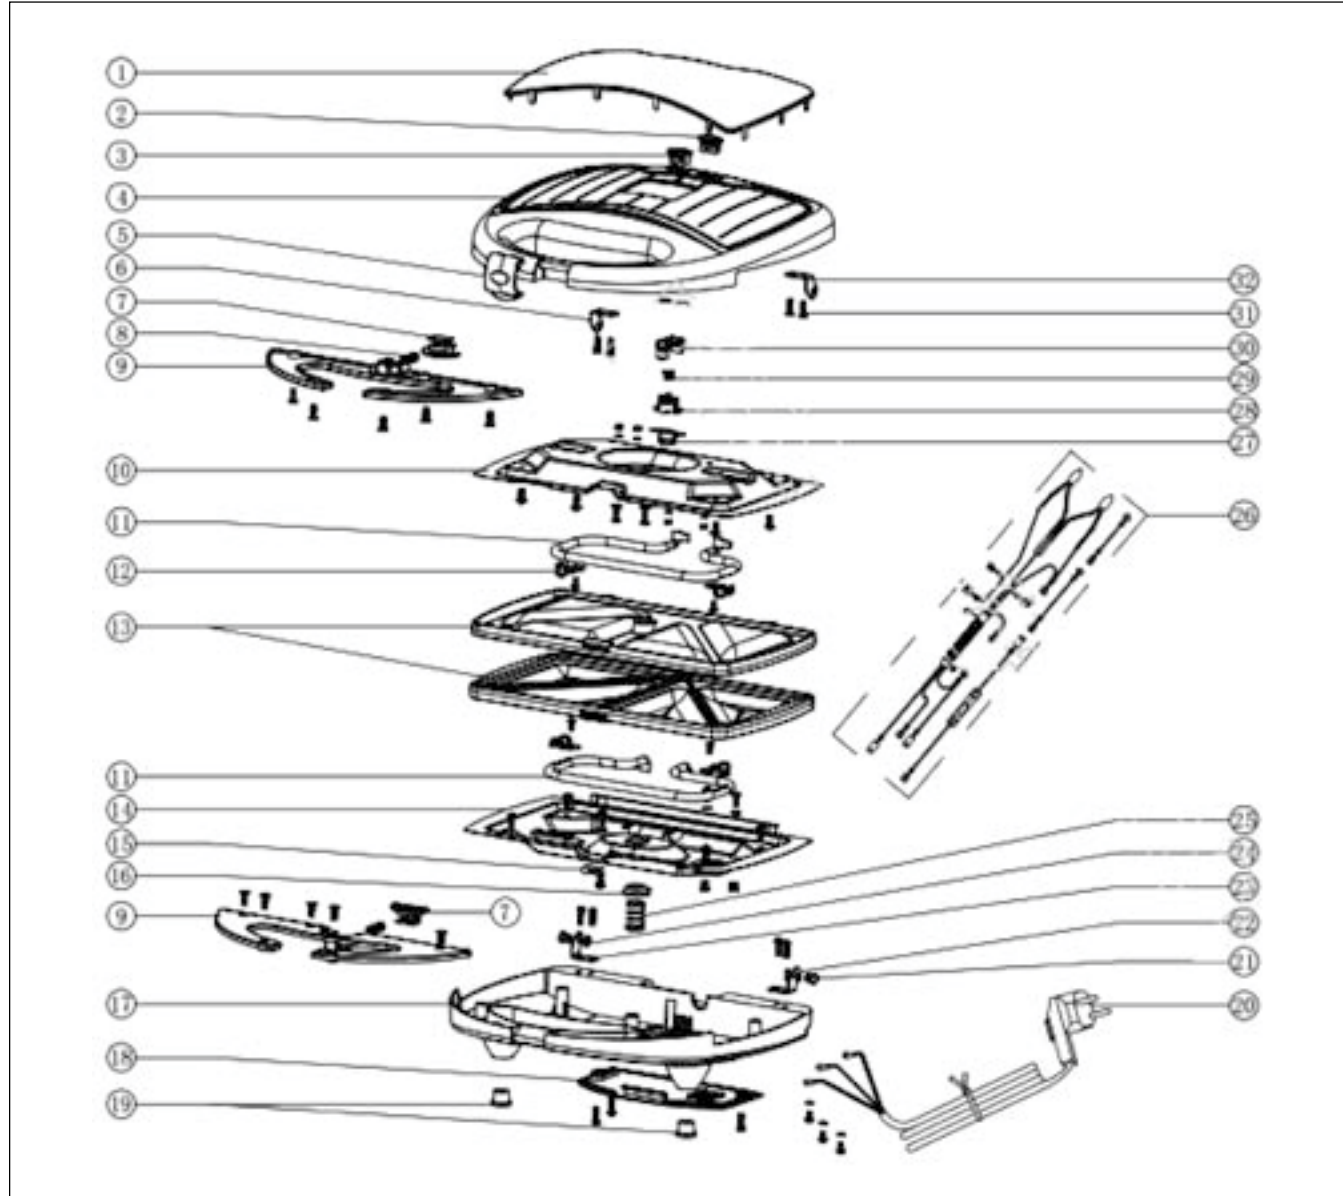

Sandwich Maker GL 3027 DX		
Ref. No.	Spare Part Name	SAP Code
32	Upper Strut Bar(Right)	
31	Screw & Washer	
30	Thermostat Stationary	
29	Thermostat Spring	
28	Thermostat Holder	
27	Thermostat	50002472
26	Internal Wire Set	
25	Support Cap Spring	
24	E-Ring	
23	Lower Strut Bar(Left)	
22	Lower Strut Bar(Right)	
21	Axletree	
20	Power Cord	
19	Rubber Foot	
18	Electrical Cover	50002471
17	Lower Housing	50002479
16	Support Cap	
15	Fuse Stationary	
14	Lower Reflector Plate	
13	Cooking Plate	50002476/2475
12	Clamp Of Heating Element	
11	Heating Element	50002480
10	Upper Reflector Plate	
9	Handle Cover	50002473
8	Pushing Button Spring	
7	Pushing Button	
6	Upper Strut Bar(Left)	
5	Handle Lock	50002470
4	Upper Housing	50002478
3	Lamp Cover(Red)	50002468

Ref. No.	Spare Part Name	SAP Code
2	Lamp Cover(Green)	50002469
1	Stainless Cover	