


Rice Cooker GL 3055 DX

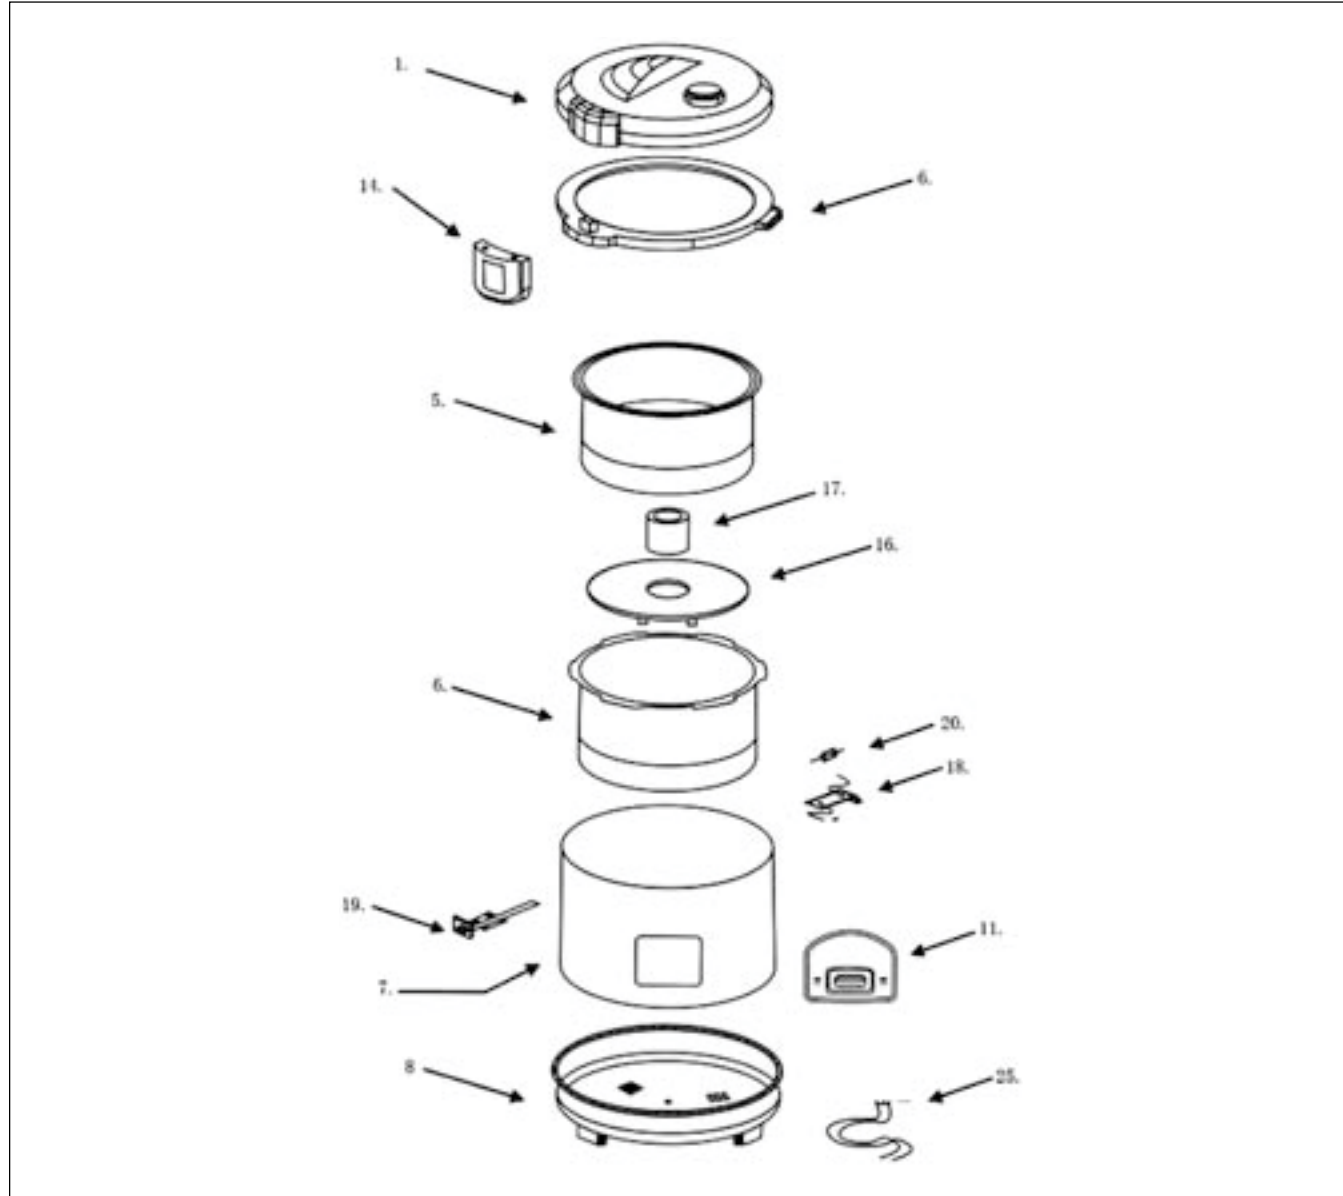

| Rice Cooker GL 3055 DX | | |
|------------------------|-------------------|----------|
| Ref. No. | Spare Part Name | SAP Code |
| 5 | AL Inner Pot | 50002572 |
| 20 | Fuse | 50002580 |
| | Gift Box | 50002578 |
| 14 | Gutter of Water | 50002571 |
| 16 | Heating Plate | 50002574 |
| 17 | Magnet Controller | 50002584 |
| 1 | Plastic Cover | 50002570 |
| 25 | Power Cord | 50002576 |
| 11 | Switch | 50002575 |
| 19 | Switch Lever | 50002573 |
| 18 | Warm Plate | 50002582 |