

## GL 4045

- Remove the coupling by hit & rotating in clockwise.
- Remove two no. plastic caps to uncover the screw.
- Open 3 screws of base plate.
- Take out the knob with pointed screw driver.
- Rotate the switch front portion & take out, rotating anticlockwise.
- Open 4 screws of motor from body top side.
- Replace the motor by removing connection caps/de-soldering switch.
- You may also change the inner motor top packing rubber.
- NOTE: while assembling back, tie all the wires properly to avoid getting tangled with motor fan.
- GRINDER JAR: hold the blade and open the coupling by rotating clockwise.
- To replace grinder cup housing: open 3 SS CSK screws.
- Remove bush cap, Push bush, take out the SS Cup from grinder cup housing.  
Change, what is required/
- Reassemble.
- Blender jar of 4045: Hold the blade part and rotate the coupling clockwise.
- Remove the spindle from jar.
- Open the aluminum bush molder with the help of in & out nut opener set goti no: 33 & 26.
- Replace the plastic jar or aluminum bush molded.
- Reassemble