

Cooking Range 2013 PL TR AI FFD

How to replace the Top Glass of Cooking Range

- Open 5 dome nuts of glass holder.
- Insert the glass into the glass holder.
- Match the hole of the glass with holder.
- Insert the screw from back and tight the dome nut.

How to replace the oven glass of CR:

- Open 3 screws fitted on door glass handle.
- Remove the broken glass.
- Slide the new glass in oven glass door holder
- Put the handle & tight the three screw.

How to remove the door of oven

- Open the Full door
- Open the lock of both the hinges and fix in the lever
- Lift the oven door upward little bit, tilt & pull the door completely
- Fix it similarly.
- Insert the hinges inside the chamber; match these with lever inside the chamber.
- Once ensure that door hinges are locked inside, leave door down ward gently.
- Take the hook down from upper lever and fix on lower lever.
- Close the door.