

## **GL 4044 HB:**

- Open 4 screws.
- Body will divide into two: Front & Rear.
- Open 4 screws to separate shaft assembly from motor.
- D-solder the switch connector. And replace motor /switch.
- To open the spindle with blade, hold the blade, put rubber coupling with (-) screw driver by rotating in anticlockwise direction.
- Pull spindle by pulling from blade. Change spindle or metal side housing as required..
- Reassemble.