

INDUCTION COOKERS

How to repair GL 3074:

- Turn back the product downward on the covered table.
- Open back screws with (+) screw driver
- Turn back the product upward.
- Remove the display PCB connector from Main PCB.

How to replace control Panel:

- Open 10 screws with (+) screw driver.
- Replace it with new and refix.

How to replace Main PCB:

- Remove Coil by opening three screws
- Remove the three connections from PCB.
- Remove the fan connection by pulling connector
- Remove the main lead
- Remove 4 screws and replace with new PCB. Position the new PCB and screw.
- Fix fan, coil and main lead wire as removed earlier.
- Close the main body.
- Similarly, the Coil & Fan can be removed and replaced.
- The heat sensor, fixed on coil, can also be checked and replaced, if defective.