

Mini Chopper 4043:

- Open 3 screws and separate the top.
- Remove 3 screws of motor mounting disc.
- To remove motor, open 4 screws of MMD and motor will get separated from gear box.
- Motor will get separated by disconnecting the wires.
- To remove drive gear from motor, hold the shaft from the rear side with – screw driver and rotate gear anticlockwise.
- Replace the motor and driver gear.
- To replace driven gear or drive spindle, open 3 screws of gear box.
- Remove the disc driven gear cover.
- Take out the driven gear to replace.
- Remove all the three gears.
- Remove c clip from rivet and take out drive spindle, replace and reassemble.
- To replace switch, remove push button operating knob by pulling plastic button with sharp edge metal blade.
- Take out the switch and d-solder and change with new one.