

GL 4025 MG

- Remove the coupler by hit and rotating clockwise.
- Open 6 no screws to remove base plate.
- Detach the circuit breaker (TOP) by removing detachable wires.
- Open 4 no. screws to open the top body.
- Motor will get separated.
- Replace it and reassemble.

How to service Jar:

- Open the coupling by rotating clockwise.
- To remove jar collar, open the metallic nut inside the jar by rotating anticlockwise.
- Can remove the handle by opening 2 screws.