

Pop-Up Toaster GL 3015:

How to remove handle slide button:

- Take out the handle button cap with the help of sharp pointed screw driver.
- See the Leaver Patti, its bent. Straighten it with the help of nose pliers.
- Remove the button by pulling it out.

How to replace the PCB:

- Remove the connection.
- Remove the knob by pressing from inside the body.
- Open 2 screws of PCB and detach it from body. Replace with new one and pack.

How to replace magnetic coil:

- Remove connection from PCB.
- Open 2 screws and replace with new one.