

Rice Cooker GL 3055DX

How to repair Rice Cooker:

- Turn back the rice Cooker and keep it on Rubber Mat.
- Remove inner bowl to protect main lid.
- Open three leg screws. The bottom plate will get separated.
- Check the fuse by putting wires of multi meter/ continuity tester on 2 ends.
- If beep sound comes, it shows, fuse OK.
- If beep is not there, replace the fuse by opening 2 points.

How to replace the element:

- Put the multi meter/continuity tester wire on two points of element, if reading is coming its ok and if not responding element is defective.
- Remove all the connection and open the three screws of body holding elements.
- Open the screw of keep warm plate.
 - Remove the magnet controller from thermostat/switch button by rotating the strip.
 - Replace with new
 - Fix magnet controller in element then place the element back.
 - Tight the screw
 - Fix magnet controller with switch button.

How to replace switch button:

- Remove all connection from switch button
- Turn back and open two screws from inside.
- Replace it with new one and put all the connections.

How to replace keep warm plate:

- Remove one screw from base and remove the connection.
- Replace it and fix it.