

# **Steam Cooker GL 3051**

## **How to replace Water Tank**

- Turn back the unit.
- Open 6 screws of base plate.
- Open 5 screws of tank from inside.
- Remove the spring lock of steam outlet pipe & water inlet pipe of element from tank.
- Take out the connector elbows.
- Take out the tank.
- Remove the rubber seal by rotating from tank.
- Place the rubber seal tightly by rotating on steam outlet nozzle and water inlet nozzle.
- Fix the screw.

## **How to replace the fuse:**

- Remove the fuse from clamp.
- Remove the sleeve.
- Check the fuse with multi meter or connectivity tester.
- If fused, replace with new one and refix.

## **How to replace the thermal cut out:**

- Check with multi meter or connectivity tester.
- If not beeping, replace it by removing the connection and opening the holding clamp.

## **How to replace the Element:**

- Check the element with multi meter or connectivity tester.
- If giving reading, its OK. If not, replace it.
- Remove all the connection of element.
- Remove thermal cut out & fuse.
- Remove from rubber pipes.
- Remove from element holding bracket.
- Place new element and fix thermal cut out & fuse. Put all connections on bracket.

## **How to replace time- On/Off switch:**

- Remove the knob.
- Open 2 screws.
- Take it out and remove connection.
- Place new one, fix connection, screw back & put the knob.