

Steam Iron: GL 8021

How to replace water tank:

- Open 2 back screws.
- Open water inlet cover and open screw inside.
- Remove spray button and open screw.
- Remove function selector knob.
- Remove the handle by disconnecting water nozzle.
- Remove the water spray jet assembly.
- Remove the washer of water inlet.
- Remove the temperature selector knob.
- Open two screws of water tank from back side and one from front.
- Loosen the wire clamp to give the space to take the water tank out.
- Remove three wire connection maps.
- Remove indicator connections that water tank is free. If want to replace due to leakage, replace it and assemble back.

How to replace thermostat/heat protector/fuse & Sole plate:

- Open three screws of heat protector and remove it.
- Remove 5 heat resist ceramic stones kept between heat protector and sole plate to avoid heat transfer.
- Change the broken heat protector.
- To replace sole plate, remove steam guide.
- Check fuse by opening fuse holding screws.
- Remove fuse connection from element.
- Remove glass sleeve to open the fuse and check it with multi meter or continuity circuit.
- If reading is coming means OK< if shows no reading, then is defective.
- Remove all connections from elements of sole plate.
- To check thermostat, rotate spindle of thermostat to check.
- Connect & disconnect or check by using Multi meter. If not OK, replace by removing 2 screws.
- Thermostat setting: Although the thermostat is pre set from factory, but in case, need to adjust, you can adjust by rotating the screw inside the spindle.

Wire Connection:

- Do the wire connection using the connection cap & then assemble the water tank.
- Now fix the handle, before fixing position.