

Tandoor GL 5014:

How to replace the window glass:

- Straighten the glass holder clips.
- Slide the glass towards outside to remove.
- Insert new glass and tighten the glass holder clips by bending it.

How to replace the heating element:

- Turn back the tandoor. Keep on rubber mat to avoid any scratches on Stainless Steel body.
- Open 14 SS screws.
- Remove the knob by pulling and open 2 screws of operating knob.
- Check top & bottom element with multi meter or continuity tester.
- Keep the glass wool safely aside.
- If defective, will not show any resistance value.
- If OK, will show the resistance value.
- Now, to replace the element, remove all connections.
- Remove the glass wool.
- Open 6 screws each from both the sides.
- The top will get separated from bottom.
- Twist the element holder sides & take out the element for replacing.